

000-R15

000-R15

IBm AnyPlace Kiosk 5xx, 7xx, and 9xx Technical Mastery

Version: 3.0

000-R15**QUESTION NO: 1**

The IBM Diagnostics for POS Systems and Peripherals runs from which media?

- A. the enterprise server
- B. a USB connected CDROM drive
- C. a USB memory key, 256MB or larger
- D. a subdirectory on the hard disk drive of the system

Answer: C

QUESTION NO: 2

What is the standard RAM configuration on all IBM AnyPlace Kiosk models?

- A. 1GB
- B. 2GB
- C. 256MB
- D. 512MB

Answer: D

QUESTION NO: 3

Where can either the IBM AnyPlace Line Scanner or the IBM AnyPlace Omni Scanner be attached?

- A. RJ45 connector located under the larger I/O door
- B. RJ45 connector located under the side access door
- C. RJ45 connector located under the smaller I/O door
- D. RJ45 connector located under the chin of the display

Answer: A

QUESTION NO: 4

What is the purpose of attaching the POS Hub to an IBM AnyPlace Kiosk?

- A. It provides backup power to the AnyPlace Kiosk system.
- B. It provides support for a second AnyPlace Kiosk in an adjacent checkout location.
- C. It enables the AnyPlace Kiosk to which it is attached to act as a centralized server.
- D. It enables attachment of peripheral devices such as a cash drawer, customer display, keyboard, or printer.

000-R15

Answer: D

QUESTION NO: 5

Although the normal electrostatic discharge is _____ volts, IBM tests to make sure the IBM AnyPlace Kiosk can withstand _____ volts without damage.

- A. 700 and 1,500
- B. 1,500 and 7,000
- C. 7,000 and 15,000
- D. 15,000 and 25,000

Answer: C

QUESTION NO: 6

When utilizing the IBM AnyPlace POS Hub, where does the IBM AnyPlace Kiosk get its power?

- A. a lithium ion battery
- B. an external power supply
- C. the AnyPlace POS Hub to which it is connected
- D. its own integrated power supply that is plugged into a wall outlet

Answer: C

QUESTION NO: 7

A customer has been using several IBM AnyPlace Kiosk Models 1Z2 and 1Z5 since mid-2006. They are very interested in implementing the IBM AnyPlace POS Hub. Which information should be provided to this customer?

- A. The POS Hub is fully compatible with their current AnyPlace Kiosk models.
- B. It is not possible to implement the POS Hub with their current AnyPlace Kiosk models.
- C. It is possible to implement the POS Hub only if they are running Windows Embedded for Point of Service (WEPOS).
- D. It is possible to implement the POS Hub only if their current kiosks were originally ordered with the optional PCMCIA slot.

Answer: B

QUESTION NO: 8

What is the final step to restoring CMOS settings?

000-R15

- A. update BIOS
- B. update all drivers
- C. recalibrate the touch screen
- D. restore any customer-specific settings that were affected

Answer: D

QUESTION NO: 9

Which three operating systems are supported by IBM on the IBM AnyPlace Kiosk? (Choose three.)

- A. IBM PC DOS 7.0
- B. Microsoft Windows 2000
- C. IBM Retail Environment for SUSE Linux
- D. Microsoft Windows Vista Business (32-bit)
- E. Microsoft Windows XP Professional Edition (32-bit)
- F. Microsoft Windows Embedded for Point of Service (WEPOS)

Answer: D, E, F

QUESTION NO: 10

In order to prevent electrostatic discharge (ESD) damage when removing or replacing parts in the IBM AnyPlace Kiosk, which preliminary step should be taken before opening the device?

- A. remove wool clothing to reduce ESD
- B. connect an ESD wrist strap and cord
- C. do not stand on a carpeted surface; stand on an ESD treated rubber mat
- D. wear rubber gloves to reduce static electricity and prevent cutting fingers on the sharp edges

Answer: B

QUESTION NO: 11

The CPU fan is critical to the operation of the system. Under which two conditions will the CPU LED illuminate? (Choose two.)

- A. The fan has stopped spinning.
- B. The fan is spinning slower than usual.
- C. The fan temperature is over 90 degrees Celsius.
- D. The fan is caked with dust and other substances.
- E. The fan temperature is less than 60 degrees Celsius.